



## How to Change a fixed arc nozzle for a sprayhead



- ENSURE THAT THE SYSTEM IS NOT RUNNING
- PULL THE STEM OF THE SPRAYHEAD UP OUT OF THE GROUND IT IS SPRING LOADED.
- HOLD THE STEM WITH YOUR LEFT HAND.
- WITH YOUR RIGHT HAND TURN THE NOZZLE COUNTERCLOCKWISE.
- PLACE THE NEW NOZZLE ON THE STEM AND TURN IT CLOCKWISE.
- NOW THAT THE NOZZLE IS ON TIGHT YOU HAVE TO AIM IT.
- USE THE RATCHET FEATURE TO TURN THE STEM BACK AND FORTH TO AIM THE SPRAY. ( THIS WILL BE EASIER TO DO IF YOU RUN THE ZONE )
- USE THE ADJUSTMENT SCREW ON TOP TO MAKE ANY SMALL DISTANCE ADJUSTMENTS. ( UP TO 25%, HOWEVER REFRAIN FROM USING IF POSSIBLE)