



How to change a sprinkler head



- ENSURE THAT THE SYSTEM IS NOT RUNNING.
- DIG UP THE AREA AROUND THE HEAD AND BE CAUTIOUS NOT TO HIT THE PIPES BELOW WITH YOUR SHOVEL.
- CLEAR ALL THE LOOSE SOIL AWAY FROM THE HEAD.
- TURN THE HEAD COUNTER CLOCKWISE UNTIL IT COMES LOOSE FROM THE FITTING.
- THE HEAD MAY COME OFF WITH THE NIPPLE STILL ATTACHED, IF THIS IS THE CASE REMOVE THE THREADED NIPPLE FROM THE HEAD AND PUT IT BACK INTO THE FITTING IN THE GROUND. IF YOU DAMAGE THE THREADS, REPLACE WITH A NEW NIPPLE.
- TAKE THE NEW HEAD AND TURN IT CLOCKWISE ON THE THREADED NIPPLE UNTIL IT TIGHTENS. (DO NOT OVER TIGHTEN)
- TEFLON TAPE IS GREAT BUT NOT REQUIRED ON THE NIPPLE THREADS.
- PRESSURE TEST THE CONNECTION BEFORE YOU BACK FILL.
- AFTER BACKFILLING ADJUST THE NOZZLE FOR CORRECT COVERAGE.