




- ① On the pin header provided with kit, snip the odd pins out, leaving the plastic retainer spacers intact.

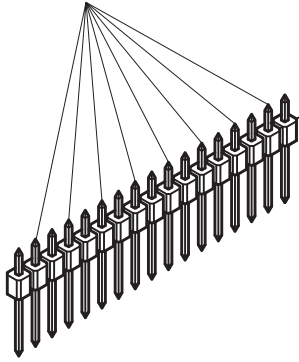


- ② Once you've snipped out the odd pins your part should look like this:

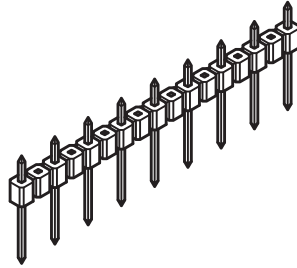


- ③ Insert the pin header through corresponding holes on the edge of the PCB and solder them in.

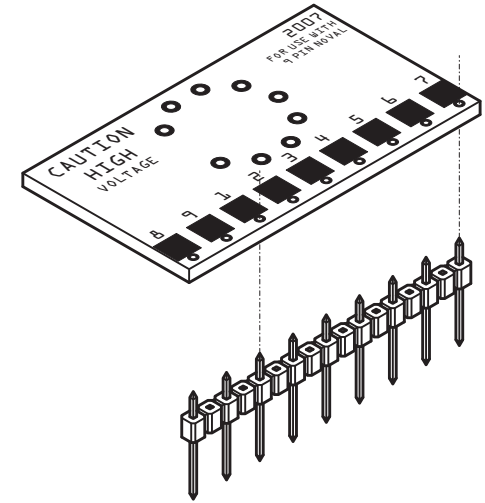

- ④ Align the noval socket (provided with the kit) with the hole pattern on the top of the board, insert pins through holes and solder.

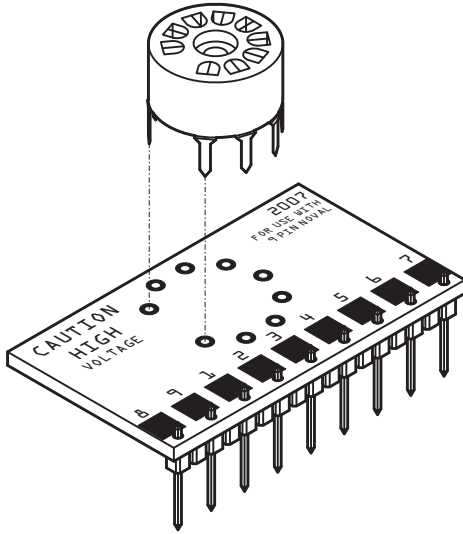

- ⑤ If your finished assembly looks like this, pat yourself on the back for a job well done.

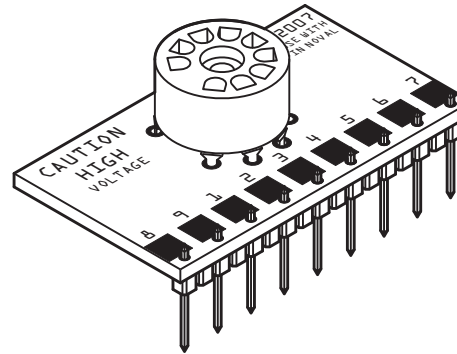

TRENTON
BLIZZARD

BB-NOVAL ASSEMBLY INSTRUCTIONS

© Copyright 2007 Trenton Blizzard Designs