




- 1 On the pin header provided with kit, snip every second and third pin, leaving the plastic retainer spacers intact.

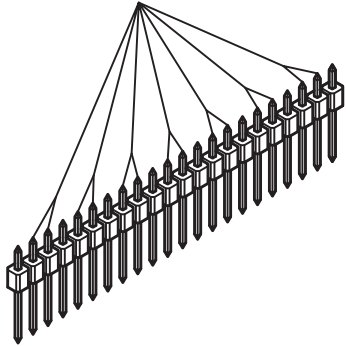


- 2 Once you've snipped out the odd pins your part should look like this:

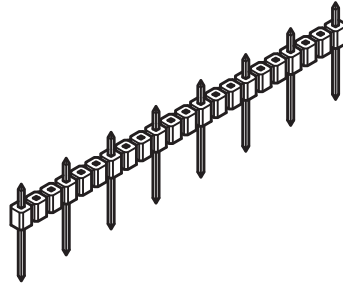

- 3 Insert the pin header through corresponding holes on the edge of the PCB and solder them in.

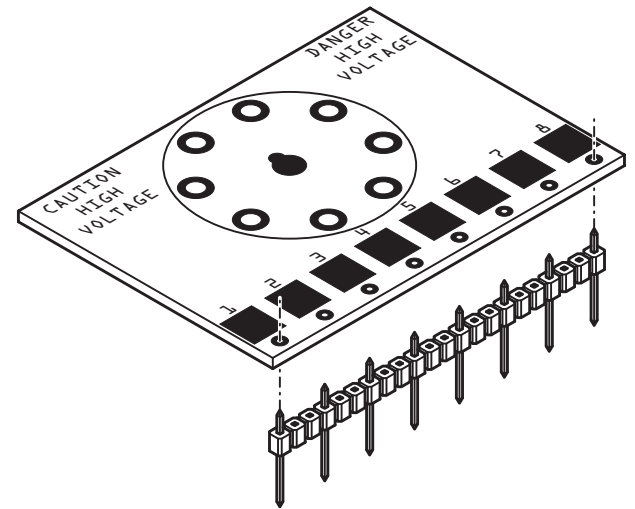


- 4 Align the octal socket (provided with the kit) with the hole pattern on the top of the board, insert pins through holes and solder.

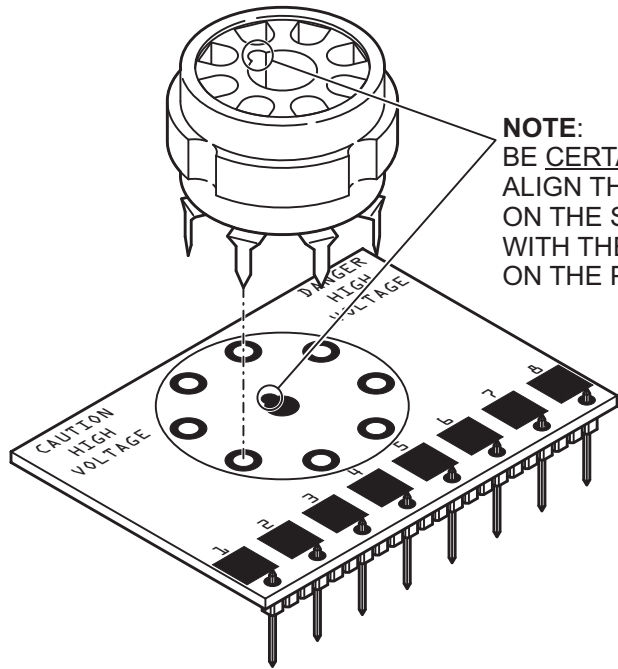

NOTE:
BE CERTAIN YOU
ALIGN THE KEYWAY
ON THE SOCKET
WITH THE OUTLINE
ON THE PCB.

- 5 If your finished assembly looks like this, pat yourself on the back for a job well done.

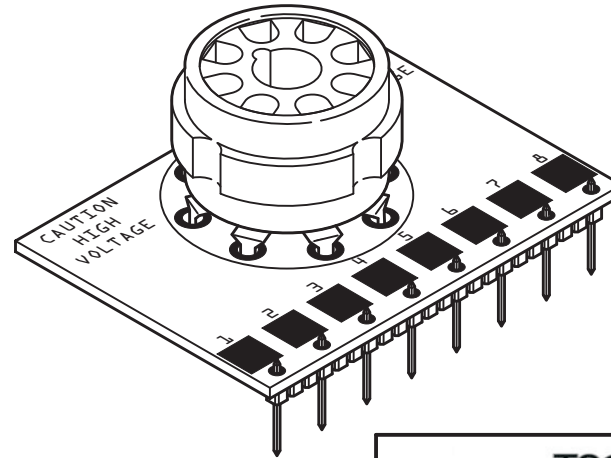

TRENTON
BLIZZARD

BB-OCTAL ASSEMBLY INSTRUCTIONS

© Copyright 2007 Trenton Blizzard Designs