
AromaLuxe™ **Glass & Wood Essential Oil Nebulizer INSTRUCTIONS**

PARTS



- 1. Wooden Base
- 2. Glass Cover
- Glass Lid
- 4. ON/OFF Power Dial
- 5. LED Light
- 6. Micro-diffusion Pipe
- 7. Adapter
- 8. Battery Indicator Light



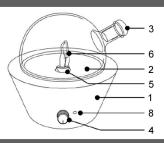

FEATURES

Rechargeable essential oil nebulizer diffuses natural essential oil without water or heat for the most pure form of aromatherapy. The Power Dial allows you to adjust the intensity of the diffusion.

Maximum Oil Capacity: 15 drops

Coverage Area: Up to 875 sq ft 2.

Intermittent Operation: 2-hour cycle (2 minutes ON; 1 minute OFF)

Light Mode: Rotating color

Includes strength control

Automatic safety shut-off

Power: Functions with either AC Adapter included, c ETL us certified, or rechargeable Lithium battery

with Battery Indicator Light

CARE & MAINTENANCE

Only use the power cord supplied with the unit. Always disconnect the power cord before cleaning.

Essential oil should not come in contact with the exterior surface of the unit.

Never immerse the unit in water.

TO CLEAN:

Gently remove the Glass Cover by rotating and lifting up. Pour soapy water into the Glass Cover and shake until the glass is clean. Rinse thoroughly with clean water. Dry with a soft cloth.

Once the Glass Cover is completely dry, carefully replace it on the Wooden Base.

CAUTION: Be sure that no soap or water remains in the Glass Cover after cleaning.

Recommend cleaning once a week during regular use.

INSTRUCTIONS FOR USE

Place diffuser on a flat surface. For optimal coverage, place diffuser in a higher location.

- Carefully place the Glass Cover onto the Wooden Base, aligning the Micro-diffusion Pipe into the center hole, and gently rotating into place.
- Add up to 15 drops of essential oil, not to exceed 2/3 the height of the Micro-diffusion Pipe.
- Place the Glass Lid onto the Glass Cover.

ON/OFF Power Dial Functions:

- Turn the Dial to the right (clockwise) to begin the 2-hour intermittent cycle
- Continue to turn the Dial to the right to increase diffusion/aroma intensity.
- After the 2-hour cycle, the unit will shut off automatically.
- Turn the Dial to the left (counterclockwise) until it clicks to power off.

Battery Indicator Light:

= The diffuser's Lithium battery needs to be charged Green Light = The diffuser's Lithium battery is fully charged

Orange Light = The diffuser is operating

NOTE: During operation with AC Adapter, light will be orange even if fully charged.

NOTES:

- If all of the oil has been diffused before the end of the 2-hour cycle, turn the unit off manually and disconnect the Adapter.
- To use wireless diffusion, the battery must be charged for 6 hours. This will provide approximately 4 hours of diffusion.



